

**DP-43-FP, DP-43-GRIP, DP-43-GRIP2.2,
DP-43.1-GRIP, DP-43.1-GRIP2.2, DP-43.1-GRP, DP-43-P**

**DIAPHRAGM PUMPS
Parts & Instruction Manual**



DP-43-P with SC-1066-2 Pressure Regulator Shown


CDS-JOHN BLUE COMPANY

DIVISION OF ADVANCED SYSTEMS TECHNOLOGY, INC.


165 Electronics Blvd., Huntsville, Alabama 35824

Telephone: (256) 721-9090 • FAX (256) 721-9091 • Call Toll Free: 1-800-253-2583

DP-43-P

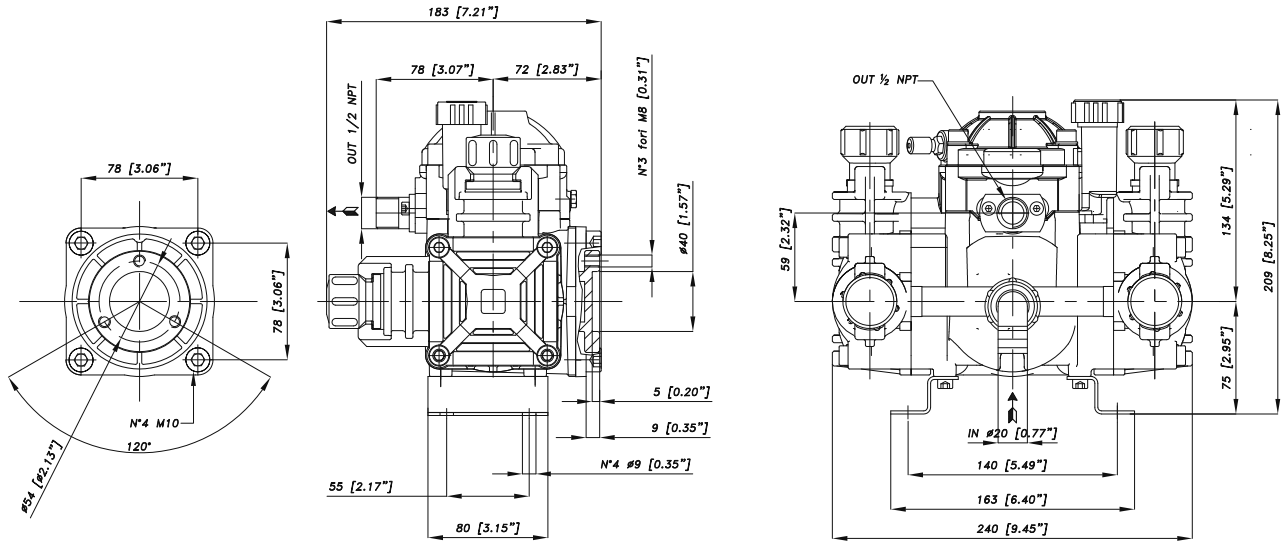

DP-43E-GRIP & DP-43E-GRIP2.2

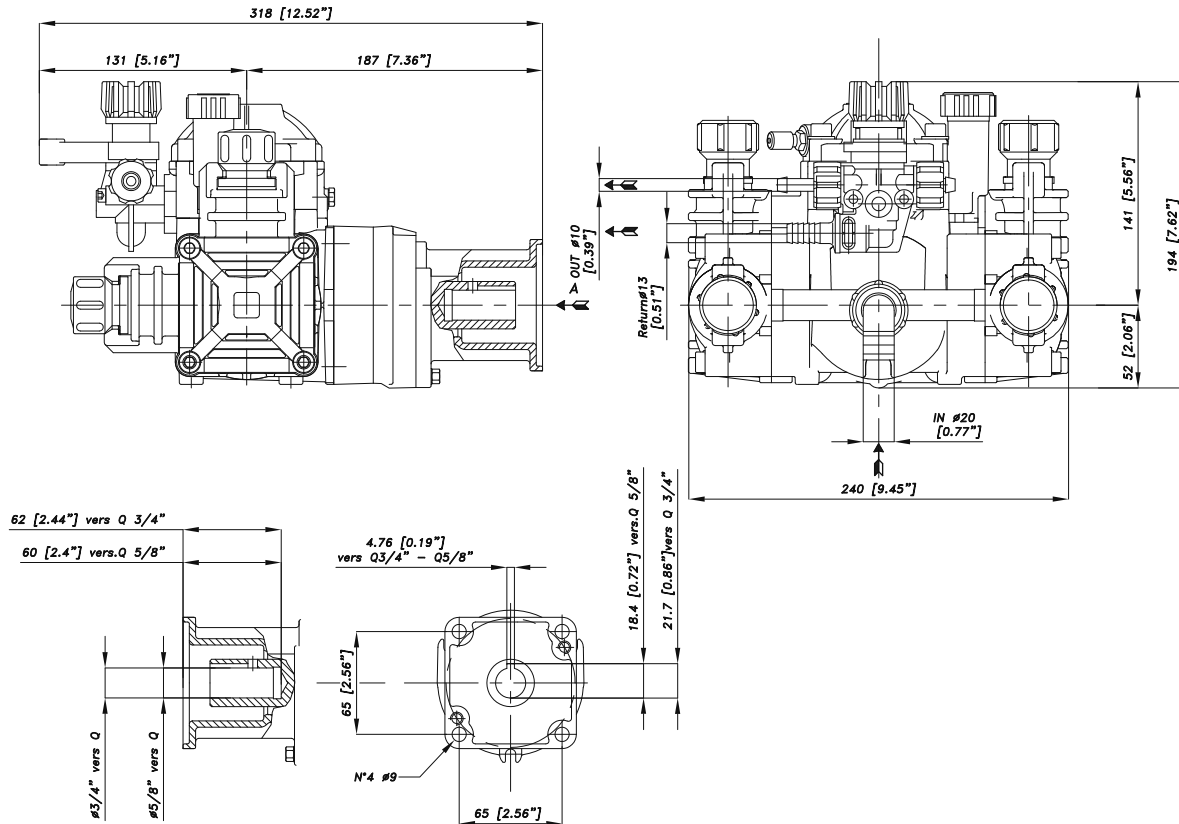

NOTES TO THE OWNER

Thank you for purchasing a CDS-John Blue diaphragm pump. These pumps are equipped with mechanical diaphragms. They are manufactured with materials that make them suitable for weed control, liquid fertilizer, spraying and washing. A complete system with accessories is easily adapted to tractors, sprayers and boom sprayers, electric motors and gasoline/diesel engines.

This manual has been prepared and illustrated to assist you in the maintenance of your CDS-John Blue Diaphragm Pump. Enter your serial number and date of purchase for the diaphragm pump in the space provided below for ordering parts and service information.

Because our engineering department is constantly improving products, we reserve the right to make design and specification changes without notice.

Serial No. _____ Purchase Date _____

SELECTION OF PUMP AND EQUIPMENT DESIGN

With regard to safety, all pumps meet the regulations in effect at publishing time. Choose the pump type carefully, according to the kind of liquid used and to the technical specifications (output, pressure) needed. If there are any questions about which pump type should be used, please contact our Technical Department.

CDS-John Blue diaphragm pumps are designed and manufactured with materials that are compatible with water. They are also compatible with most pesticides and herbicides currently on the market in the concentration recommended by the manufacturer. Use only pump liquid that is compatible with the pump component materials. Failure to follow this warning can result in injury and/or property damage.

The technical specifications of each pump (RPM, output, pressure) are shown on the label attached to the pump. For more information, refer to our Technical Department at 1-800-253-2583.

Carefully evaluate which pump model series to use. Using the correct pump type and size for the operation system can prevent possible bodily injury. Also use similar care when selecting the electric, gasoline/diesel motors or driven systems so they conform to the recommended performance to prevent personal injury and environment damage. Finally, it is important to be cautious during the design and construction of the equipment to prevent bodily injury, coming not from the pump, but from the design, construction or improper use of equipment.

A certified electrician should be used when wiring an electrically driven pump.

SAFETY PRECAUTIONS

GENERAL

- Do not operate equipment until you read and understand Operators Manual.
- Carry a first aid kit and five (5) gallons of clean water to flush contaminated skin and eyes.
- Agricultural chemicals can be dangerous. Improper selection or application can injure persons, animals, plants, soils or other property. Follow label from chemical manufacturer.
- Always wear eye protection and protective clothing when in the area of spray pump and/or control.
- In addition to the pressure regulator, use the proper safety relief valve in the plumbing after the pump.
- Before each use, make certain that all connections are tight and secure.
- Disconnect power before servicing.
- Do not pump flammable/combustible fluids.
- Do not operate pump above recommended rpm.
- Provide adequate protection in guarding around the moving parts such as the shaft and the pulley.
- Stop pump and release all pressure within the system before servicing any component.
- Do not operate pump above 145°F (62°C) liquid temperature.

WARNING: Use of this product for any purposes other than its original intent, abuse of the product, and/or modification to the original product is strictly prohibited by CDS-John Blue Company. CDS-John Blue Company reserves the right to deny warranty or liability claims in any/all situations involving misuse, abuse or modification.


The original intent of this product does NOT include use where the maximum allowed speed, pressure, or temperature is exceeded, and it does NOT include applications utilizing fluids that are not compatible with the product's component materials. Do not use this product with flammable or combustible fluids such as gasoline, kerosene, diesel, etc., and do not use in explosive atmospheres. Failure to follow this notice may result in serious injury and/or property damage and will void the product warranty. If in doubt about your application, contact your stocking dealer or the CDS-John Blue technical staff at 1-800-253-2583.

OPERATIONAL

- Equipment should be operated only by trained, responsible people.
- Do not allow anyone but operator on equipment.
- Wear safety goggles and/or respirator when operating applicator.
- Do not attempt any service or disassembly without stopping machine and releasing all pressure from system.
- Do not operate equipment with shields removed.
- Make a visual inspection of all hose and fittings for soundness on a scheduled basis.
- Replace anything which appears questionable.

INSTALLATION




1. Pump should be installed perfectly lined up with the driven gears (pulleys, gear boxes, overgears, etc.).
2. Attach the pump to a strong base plate and anchor it with bolts sufficiently strong enough to hold it in place.
3. Proper selection of type and hose size is vital to good performance.
 - Diameter of suction, discharge and by-pass hoses should be at least that of the pump hose barb or greater.
 - Use only hoses rated for maximum pressure rating of the pump.
4. Use suction line of spiral steel wire braid reinforced suction hose to prevent collapse. Use good quality hose clamps and tighten securely.
5. Use only components (hose fittings, clamps, etc.) rated for maximum pressure rating of the pump.
6. Failure to follow the above information can result in malfunctions of the pump and will void the product warranty.

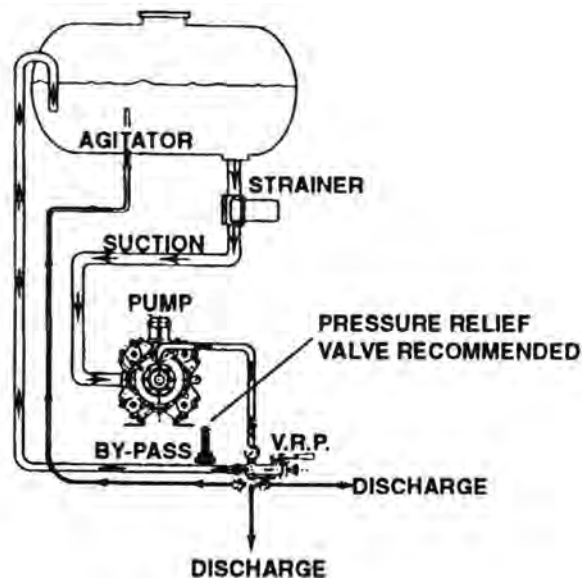

INSTALLATION SCHEME

CHECKS TO MAKE BEFORE USING THE PUMP

- With the pump not running, check to make sure that the oil level is correct. Add oil, if needed, taking care not to exceed the indicated level. Repeat with pump running. See “Oil Change” on page 7.

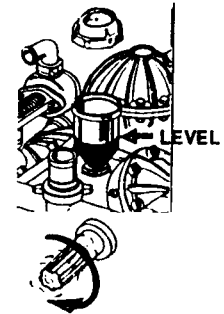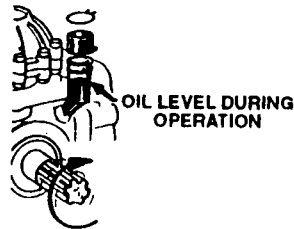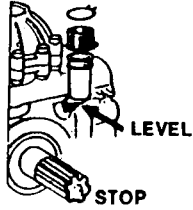

- Check to make sure the inlet and discharge hoses are not crimped. Also make sure the strainer is clean.
- Prevent any hose restrictions and be sure connections are tight to prevent air entering, since these conditions will compromise pump performance.
- If pumping from a tank, check to make sure that the control unit by-pass line is not too close to the inlet line. Make sure that it does not create turbulence inside the tank.
- Turn the pressure adjustment lever to the by-pass position when starting the pump.
- The pulsation dampener on the pump or on the pressure line is generally charged at 80-120 psi, the recommended pressure rating for the pump.
- For different working pressures, set the pressure of the pulsation dampener as follows:

WORKING PRESSURE

300 - 700 psi
150 - 300 psi
70 - 150 psi

PULSATION DAMPENER PRESSURE

80 - 120 psi
70 - 80 psi
15 - 70 psi

Note: As a general rule, set the pulsation dampener to 1/3 the working pressure without exceeding 100 psi. Also, with the pump not running, check the pressure with a pressure gauge. It is a good practice to inspect the pulsation dampener diaphragm at regular intervals.

SUCTION HEAD

Do not use pump for filling the tank. The hydroinjector, with a proper nozzle, can be used for this purpose. Avoid suction head higher than approximately 10 ft. and use the correct length for hoses, without elbow runs, better if pre-charged. In this case some problems may occur with the pump diaphragms.

OPERATING INSTRUCTIONS

- When starting pump, turn the valve lever to the dump position (by-pass) to facilitate priming. Once the pump is primed, turn the valve lever to the “PRESS” position and adjust the working pressure with the knob: turning knob clockwise will increase pressure, turning knob counterclockwise will decrease pressure.
- Operating pump above recommended rpm will not improve performance, but may damage the pump. Operation at rpm higher than specification voids all warranties.
- Be sure that the oil level is not above the maximum level with the pump running with pressure.

AFTER USE

After use, in order to prevent damage, flush the pump and let it operate a few minutes at working pressure with a solution that will neutralize the liquid last pumped (refer to that manufacturer’s instructions). Afterward empty the pump, so that the pressure drops to zero (“0”), and then let the pump run without liquids for two minutes.

To protect pump from freezing, flush pump per instructions above (after use) and then flush with straight RV-antifreeze. Empty the pump per the instructions above.


ORDINARY MAINTENANCE FOR DIAPHRAGM PUMPS

Routine maintenance on the pump includes changing the diaphragms, oil, valve assembly and o-rings, all of which are normal wear parts.

VALVE ASSEMBLY AND O-RING REPLACEMENT

Occasionally, debris can cause the valves to not seat properly or damage o-rings. To check for this problem please follow these steps:

1. Remove the valve cover (or the manifold) and remove the valves, check for debris and wear. Also check o-rings.
2. Replace necessary parts and reassemble.
3. Repeat for all valves. Consult the parts list for the corresponding valve kit or o-ring kit part number.

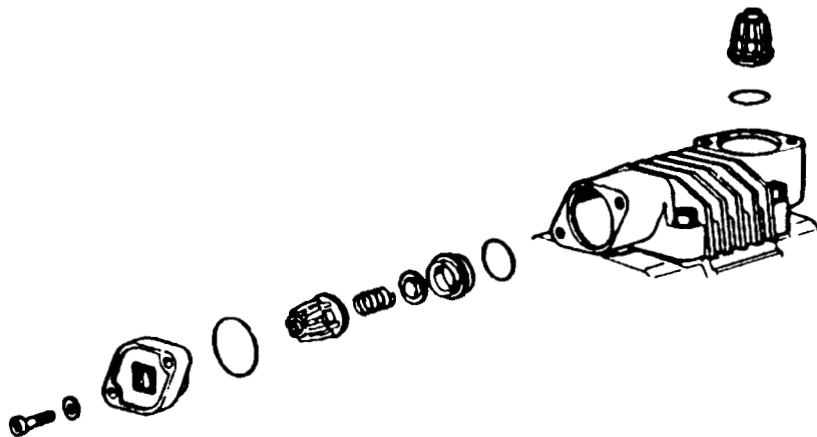


DIAPHRAGM REPLACEMENT

1. Remove the pump heads one by one.
2. Use a wrench to remove the diaphragm bolt, diaphragm and support washer.
3. If you removed the piston sleeves, replace them one at a time in their previous position. It is a good idea to mark them as they are removed.
4. Insert the new diaphragm on the piston and install it with its bolt. Use these tightening torques:

			Diaphragm Bolt Size	Torque
M 6 x 1	=	5 N.m.	6 mm	44 inch-pounds
M 8 x 1,25	=	12 N.m.	8 mm	106 inch-pounds
M 10 x 1,25	=	25 N.m.	10 mm	221 inch-pounds

The diaphragms should be replaced with the piston at its bottom and the edges inserted perfectly into the groove all the way around.

5. Replace the heads and attach them with their bolts.
6. Refill pump with oil through the reservoir and rotate the shaft to distribute oil and fill to proper level. Repeat all the checks described above in the section "Checks to make before using the pump."
7. Check the oil level with the pump running and without pressure until all air bubbles have been vented. Close the cap on the oil sight tube after the air has been completely emptied.
8. After the first inspection of the oil level as above, check the oil level again with the pump running with pressure.

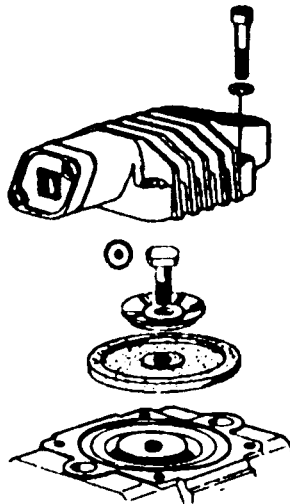

OIL CHANGE:

Change oil after 500 hours as follows:

1. Remove the tank plug and the drain plug.
2. Rotate the shaft until the oil stops flowing.
3. Wash inside parts with diesel oil.
4. Put the drain plug and pour oil (SAE 30) slowly into sight tube while turning the pump shaft.
5. Start the pump at zero ("0") pressure for a few minutes to allow the correct lubrication of inside parts.
6. While the pump is operating, check the oil level inside the reservoir.
7. If necessary, fill oil to proper level.

WARNING: Too much oil causes pressure into the crankcase and this can result in leakage or diaphragm failures.

For pumps without the drain plug, it is not necessary to periodically change the oil. However, the oil should be changed when replacing diaphragms.

COUPLING TO AGRICULTURAL MACHINERY

1. Check that the PTO of the machine does not exceed the maximum rpm shown on the pump plate.
2. Synchronized the PTO with the motor speed, consult the service manual to get the gear number and rpm corresponding to the maximum pump rotation speed.
3. When the rpm of the PTO is higher than the maximum speed, use the suggested reduction gear.
4. Disconnect PTO when moving pump out of service. If that is impossible, then disengagement should be provided.

COUPLING TO ELECTRIC MOTORS AND GASOLINE ENGINES

For direct coupling always use the suggested reduction gear.

For coupling with pulley, check alignment of the two pulleys.

$$\text{Maximum Transmission Ratio} \frac{\text{Motor RPM}}{\text{Max Pump RPM}} = K$$

After determining K, you can establish the motor or pump pulley diameter:

$$\text{Motor Pulley Pitch Diameter} = \frac{\text{Pump Pulley Pitch Diameter}}{\text{Pump RPM}} = K$$

$$\text{Pump Pulley Pitch Diameter} = \text{Motor Pulley Pitch Diameter} \times K$$

WARNING: All wiring should be done by a qualified electrician.

WARNING: Do not handle a pump or pump motor with wet hands or when standing on a wet damp surface, or in water.

For special installation or application consult our Technical Department for the necessary modifications.

ORIGINAL SPARE PARTS

Only use original spare parts, otherwise warranty will be declined.

Always enter the serial number printed on the pump label.

When ordering parts, please specify the following:

- pump model
- part number
- description
- quantity
- means of shipment

PRESSURE REGULATOR OPERATING INSTRUCTIONS

Before starting, turn the valve lever counterclockwise to the dump position (by-pass flow). Failure to follow this will void the warranty on the pump.

Turn the adjustment knob counterclockwise to decrease the pressure to zero ("0") psi. In the initial start-up, this is absolutely recommended.

When the valve is in the by-pass line, start the unit and let it run for at least two (2) minutes or until oil is displaced in the cylinder and air is evacuated from circuit.

Turn the valve lever clockwise to pressure position, close the spray gun or spray boom. Turn the adjustment knob clockwise to achieve operating pressure. Then open the spray gun or spray boom.

CHEMICAL RESISTANCE CHART

The recommendations in the chart below are based upon information from material suppliers and careful examination of available published information and are believed to be accurate. The resistance of metals, plastics and elastomers may be affected by concentration, temperature, presence of other chemicals and other factors. This information should be considered as a general guide rather than an unqualified guarantee. All recommendations assume ambient temperatures unless otherwise noted. The ratings for these materials are based upon the chemical resistance only.

Material	Viton	Buna N (Nitrile)
Acetaldehyde	A	B
Acetamide	A	A
Acetate Solv. ²	D	D
Acetic Acid, Glacial	D	D
Acetic Acid 20%	D	C
Acetic Acid 80%	D	C
Acetic Acid	C	C
Acetic Anhydride	D	A


Material	Viton	Buna N (Nitrile)
Acetone	D	D
Acetylene ²	A	A
Acrylonitrile	C	D
Alcohols Amyl	A	A
Benzyl	A	D
Butyl	A	A
Diacelone ²	D	D

Material	Viton	Buna N (Nitrile)
Ethyl	A	A
Hezyl	A	A
Isobutyl	A	C
Isopropyl	A	C
Methyl	C	B
Octyl	A	B
Propyl	A	A

A = Acceptable, No effect
 B = Acceptable, Minor effect

C = Questionable, Moderate effect
 D = Not Recommended, Severe effect

DP-43-FP

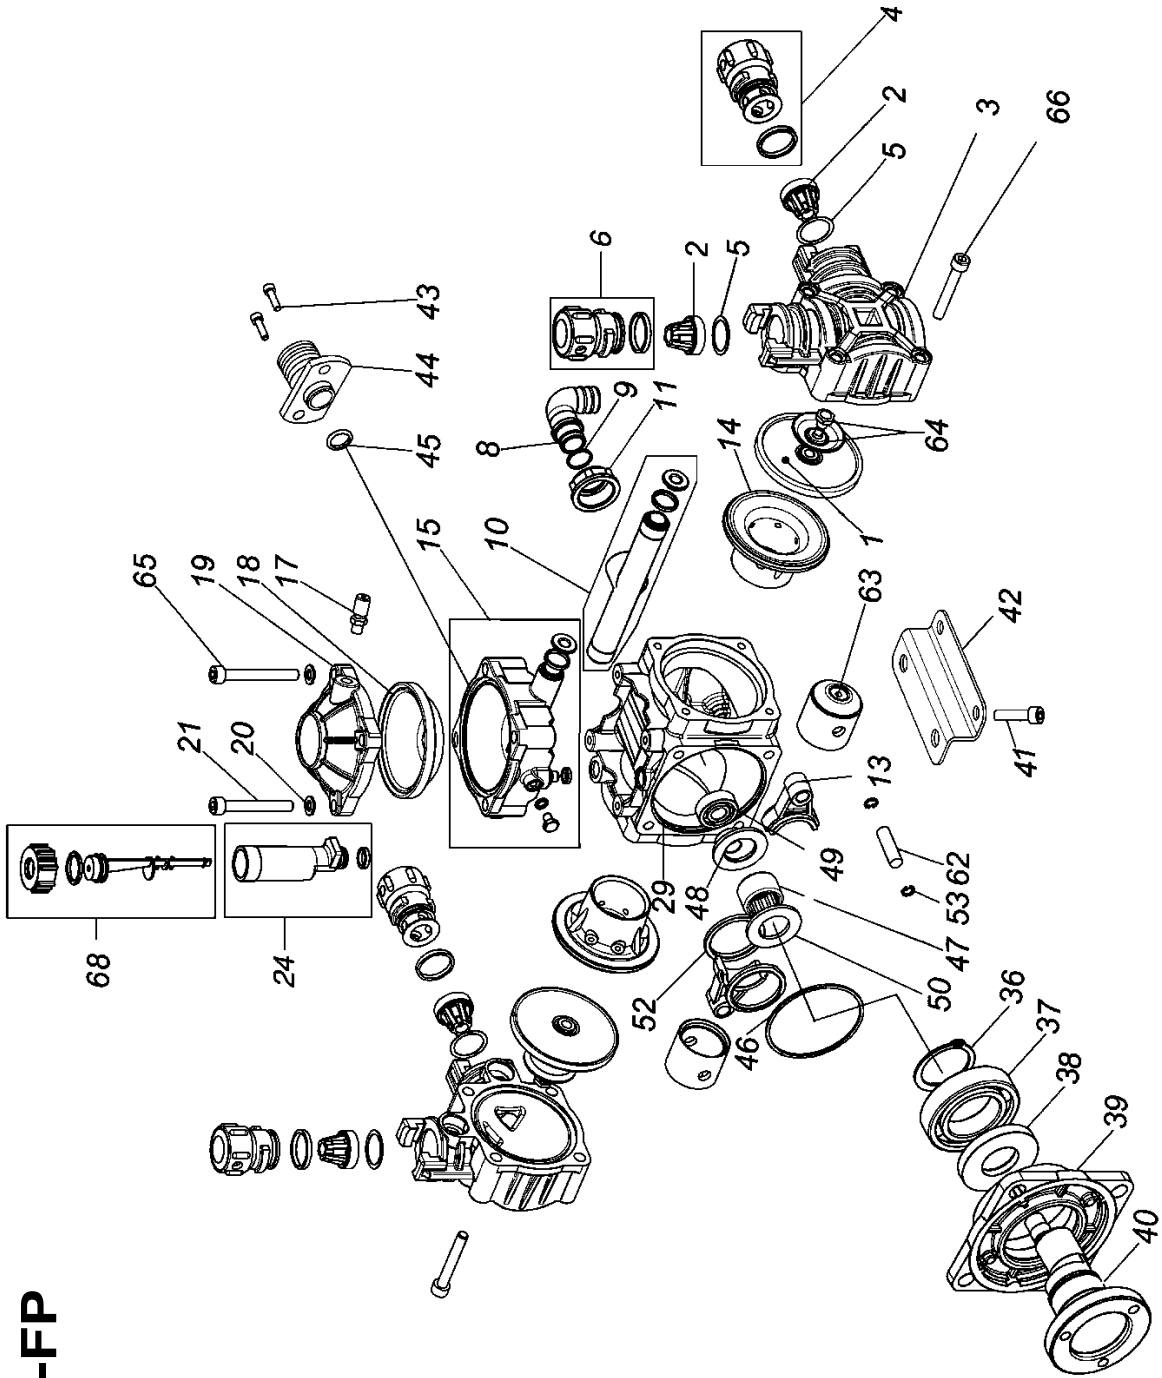

*REPAIR KIT
DP-94991297


DIAPHRAGM PUMPS DP-43-FP

❖ VALVE KIT
DP-94991697

POS	PART NUMBER	DESCRIPTION	QTY
*1	DP-94004031	PISTON DIAPHRAGM	2
❖2	DP-94982997	VALVE ASSY	4
3	DP-94030232	PUMP HEAD	2
*4	DP-94986997	KIT INLET CAP	2
❖*5	DP-82415450	GASKET	4
*6	DP-94987897	KIT OUTLET CAP	2
8	DP-84052100	SUCTION CONNECTOR DIA 20	1
*9	DP-80306050	O-RING, VITON, 1.78X12.42	1
*10	DP-98986897	KIT INLET MANIFOLD	1
11	DP-82004210	WING NUT G.3/4	1
13	DP-94000809	CONROD	2
14	DP-94000701	PISTON SLEEVE	2
*15	DP-94986797	KIT DAMPER BODY	1
17	DP-86160500	AIR VALVE	1
*18	DP-94004131	DIAPHRAGM BALLASTER	1
19	DP-94000309	COVER BALLASTER TOP	1
20	DP-84368500	WASHER DIA. 8.2X15X1,5	4
21	DP-86294500	SCREW TCEI M8X60 UNI 5931	2
*24	DP-94986697	KIT OIL FILLER	1
28	DP-80643600	TAB 5.75X5X30	1
29	DP-94030109	CRANKCASE	1
32	DP-94033609	BEARING HOUSE	1
35	DP-86318500	SCREW M10X16	4

POS	PART NUMBER	DESCRIPTION	QTY
36	DP-80126400	SNAP RING D.35	1
37	DP-81283700	BALL BEARING	1
*38	DP-80217810	OIL SEAL	1
39	DP-94032609	BEARING HOUSING	1
40	DP-94033526	CRANKSHAFT	1
41	DP-86205900	SCREW TE M6X14	4
42	DP-94009961	MOUNTING RAIL	2
43	DP-86193460	SCREW TE M5X16	2
44	DP-31135751	SS OUTLET CONNECTOR	1
*45	DP-80321710	O-RING, VITON, 3,0X14	1
*46	DP-80308090	O-RING, D.1.78X82.27	1
47	DP-81268800	NEEDLE BEARING	1
48	DP-94002632	SPACER	1
49	DP-81252200	BALL BEARING	1
50	DP-94002732	SPACER	1
52	DP-94004776	CONROD RING	2
53	DP-80000300	SNAP RING DIA. 10	4
62	DP-85200400	PISTON PIN	2
63	DP-94001708	PISTON	2
64	DP-94990997	KIT DIAPHRAGM WASHER/SCREW	2
65	DP-86295100	SCREW TCEI M8X65	2
66	DP-86290000	SCREW TCEI M8X55	8
*68	DP-94985597	KIT ROP OIL INDICATOR	1

DP-43-GRIP
DP-43-GRIP2.2

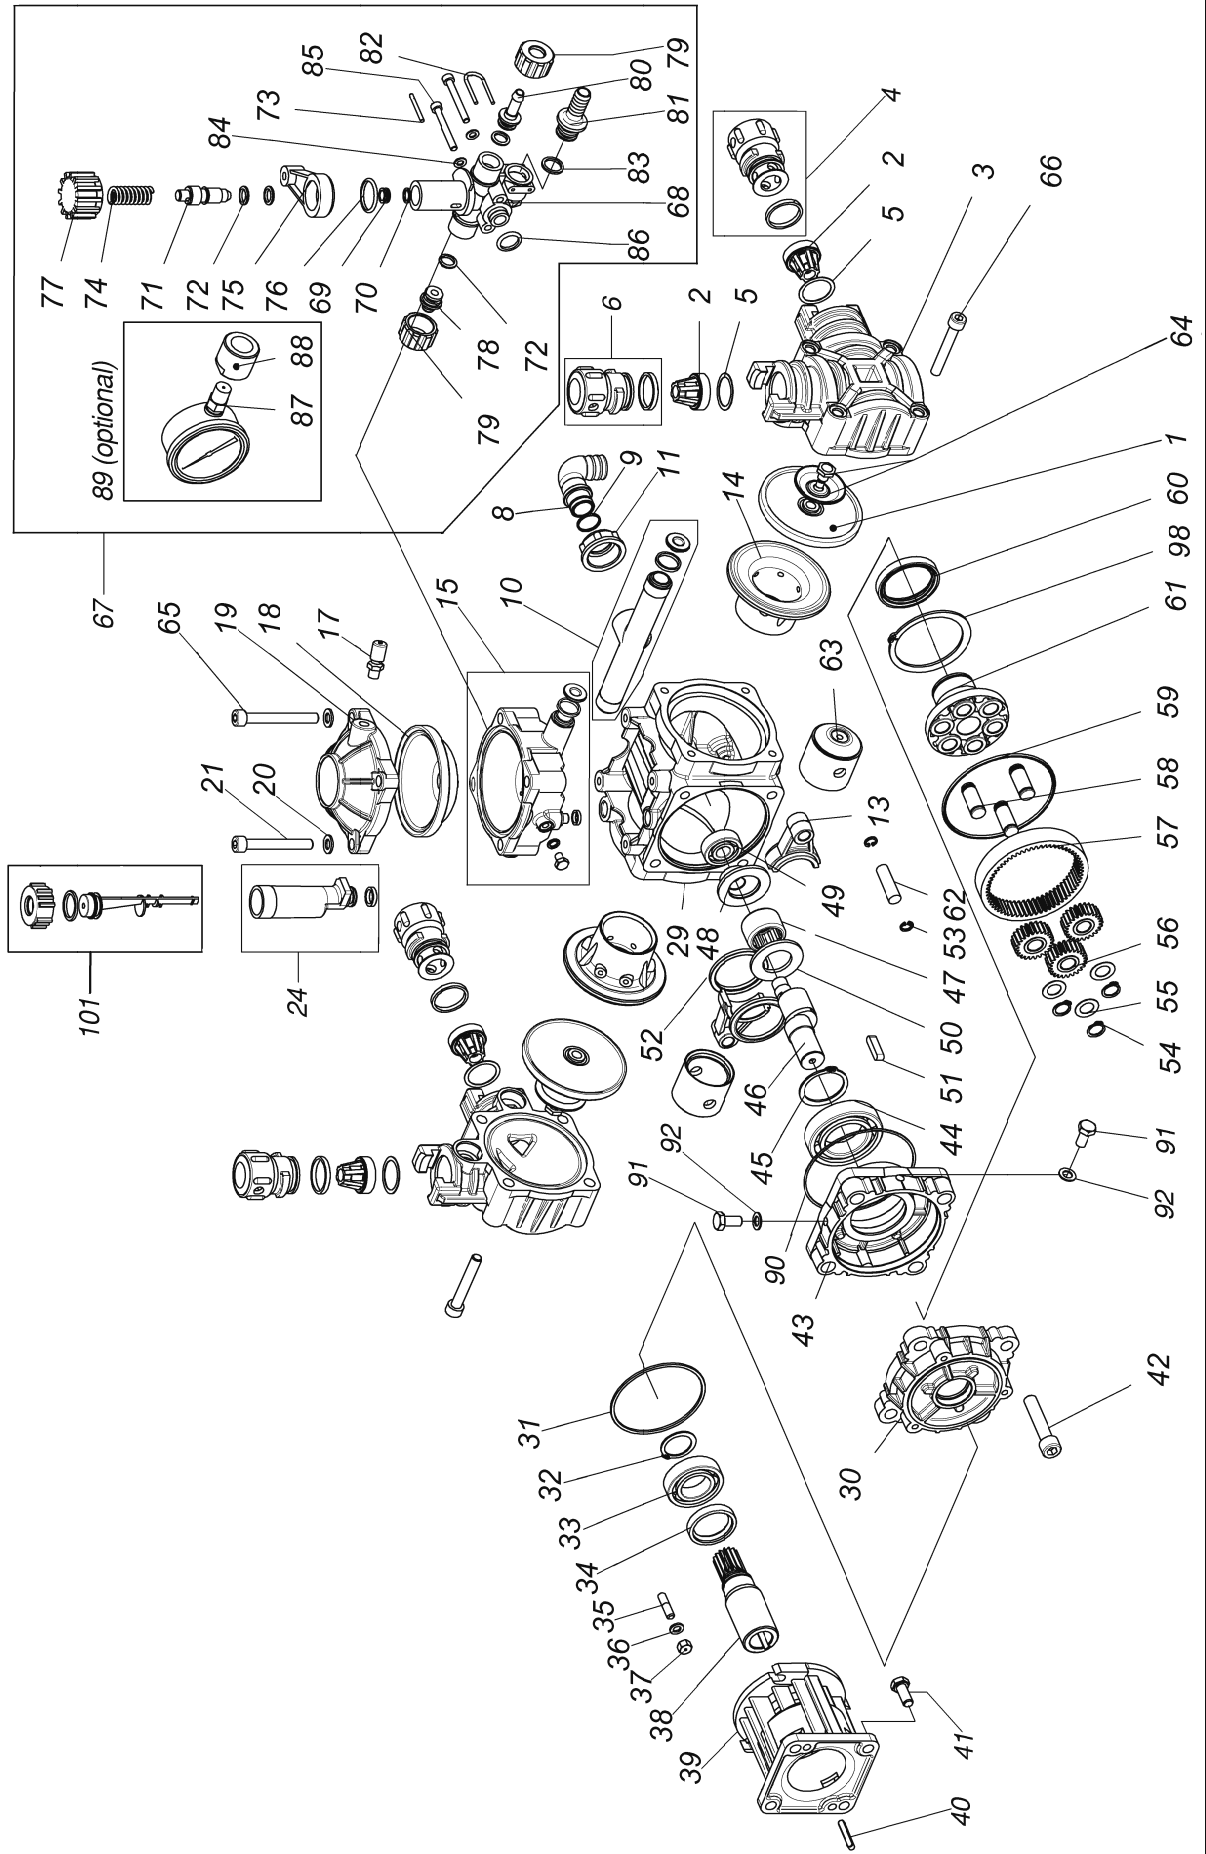

*REPAIR KIT
DP-94991297


DIAPHRAGM PUMPS DP-43-GRIP (3/4") AND DP-43-GRIP2.2 (5/8")

❖ VALVE KIT
DP-94991697

POS	PART NUMBER	DESCRIPTION	QTY
*1	DP-94004031	PISTON DIAPHRAGM	2
❖2	DP-94982997	VALVE ASSY	4
3	DP-94030232	PUMP HEAD	2
*4	DP-94986997	KIT INLET CAP	2
❖5	DP-82415450	GASKET	4
*6	DP-94987897	KIT OUTLET CAP	2
8	DP-84052100	SUCTION CONNECTOR DIA 20	1
*9	DP-80306000	O-RING, 1.78X12.42	1
*10	DP-98986897	KIT INLET MANIFOLD	1
11	DP-82004210	WING NUT G.3/4	1
13	DP-94000809	CONROD	2
14	DP-94000701	PISTON SLEEVE	2
*15	DP-94986797	KIT DAMPER BODY	1
17	DP-86160500	AIR VALVE	1
*18	DP-94004131	DIAPHRAGM BALLASTER	1
19	DP-94000309	COVER BALLASTER TOP	1
20	DP-84368500	WASHER DIA. 8.2X15X1.5	4
21	DP-86294500	SCREW TCEI M8X60 UNI 5931	2
*24	DP-94986697	KIT OIL FILLER	1
29	DP-94030109	CRANKCASE	1
30	DP-94031109	GEARBOX (ENGINE SIDE)	1
*31	DP-80321064	O-RING 2.62X75.87	1
32	DP-80118500	SNAP RING DIA.25	1
33	DP-81270000	BALL BEARING	1
*34	DP-80211700	OIL SEAL D.30X40X7	1
35	DP-83801200	STUD M6X18 UNI5911	3
36	DP-84358500	WASHER DIA.6 UNI6592	3
37	DP-81454500	NUT M6 UNI5587	3
38	DP-94032742	PINION (3/4")	1
38	DP-94033442	PINION (5/8")	1
39	DP-94033009	FLANGE	1
40	DP-80643600	TAB 4.75X5X30	1
41	DP-86256600	SCREW TE 5/16"-24 UNF (3/4")	1
41	DP-86255500	SCREW TE M8X20 UNI5739 (5/8")	4
42	DP-86350000	SCREW TCEI M10X50 UNI5931	4
43	DP-94031009	BEARING HOUSING	1
44	DP-81283700	BALL BEARING	1
45	DP-80126400	SNAP RING	1
46	DP-94032126	CRANKSHAFT	1
47	DP-81268800	NEEDLE BEARING	1
48	DP-94002632	SPACER	1
49	DP-81252200	BALL BEARING	1
50	DP-94002732	SPACER	1
51	DP-80647300	TAB 6X6X25	1

POS	PART NUMBER	DESCRIPTION	QTY
52	DP-94004776	CONROD RING	2
53	DP-80000300	SNAP RING DIA.10	4
54	DP-80108100	SNAP RING DIA.12	3
55	DP-84388000	RING D.12X18	3
56	DP-94032319	GEAR Z=24	3
57	DP-94032519	GEAR	1
58	DP-94031549	PIN	3
*59	DP-80321067	O-RING 2.62X88.57	1
*60	DP-80217800	OIL SEAL D.40X52X7	1
61	DP-94031209	GEARS HOLDER HUB	1
62	DP-85200400	PISTON PIN	2
63	DP-94001708	PISTON	2
64	DP-03002551	KIT DIAPHRAGM WASHER/BOLT	2
65	DP-86295100	SCREW TCEI M8X65	2
66	DP-86290000	SCREW TCEI M8X55	8
*67	SC-1066-2	PRESSURE REGULATOR	1
*68	DP-94020032	PRESSURE REGULATOR BODY	1
69	DP-05006851	SEAT	1
70	DP-80305600	O-RING 1.78X8.73	1
71	DP-94020432	POPPET	1
72	DP-80317400	O-RING 2.62X9.92	4
73	DP-85104500	PIN DIA 3X30	1
74	DP-94007348	SPRING	1
75	DP-94020232	LEVER	1
76	DP-80319900	O-RING 2.62X21.89	1
77	DP-94020332	KNOB	1
78	DP-94020132	PRESSURE REGULATOR PLUC	1
79	DP-82001500	WING NUT G.1/2	1
80	DP-84154400	STRAIGHT CONN DIA.10	2
81	DP-84155100	RETURN CONN DIA.13	1
82	DP-94020649	QUICK RELEASE PIN	1
83	DP-80317800	O-RING, 2.62X13.1	1
84	DP-84354200	WASHER D.5.3X10X1	2
85	DP-86194390	SCREW TCEI M5X45 UNI 5931	2
*86	DP-80321700	O-RING 3.0X14	1
87	DP-83001000	PRESSURE GAUGE (OPT)	1
88	DP-94020732	COUPLING (OPT)	1
89	DP-94984997	PRESSURE GAUGE KIT (OPT)	1
*90	DP-80308090	O-RING 1.78X82.24	1
91	DP-86245800	SCREW M8X12 UNI5739	2
*92	DP-84364290	COPPER WASHER	2
98	DP-80137900	SNAP RING	1
101	DP-94985597	KIT ROP OIL INDICATOR	1

DP-43.1-GRIP (3/4")
DP-43.1-GRIP2.2 (5/8")

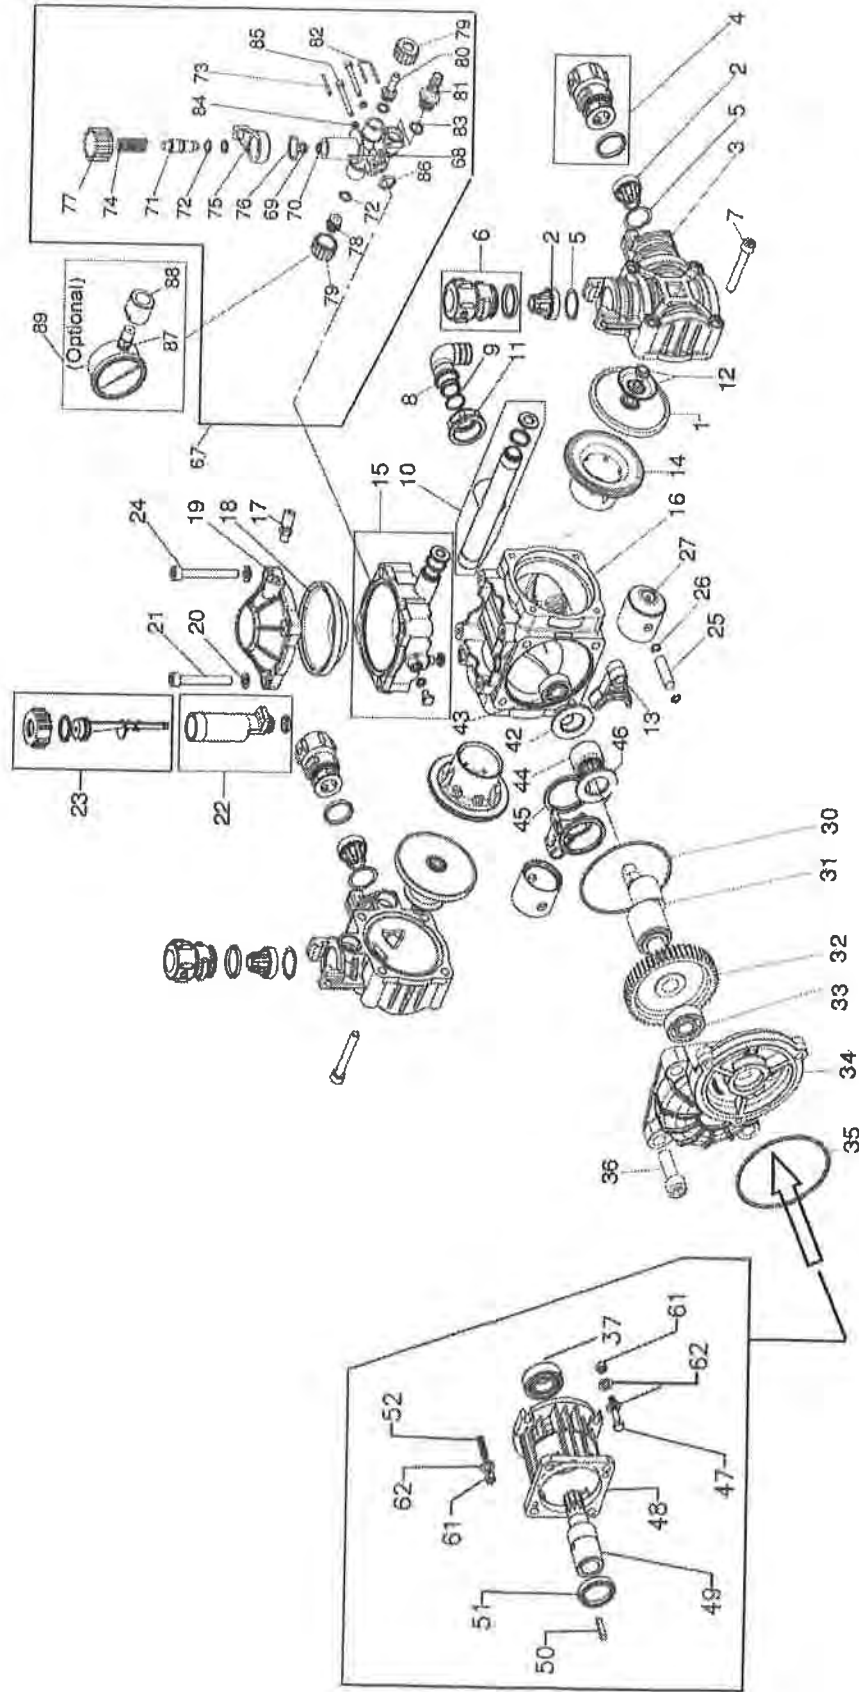

DIAPHRAM PUMPS

DP-43.1-GRIP(3/4") & DP-43.1-GRIP2.2(5/8")


❖ VALVE KIT
 DP-94991697
 *REPAIR KIT
 DP-94994297

■ DP-94987197
 DIAPHRAM KIT

ITEM	PART NUMBER	DESCRIPTION	QTY
■ 1	DP-94004031	PISTON DIAPHRAGM	2
❖ 2	DP-94982997	VALVE ASSY	4
3	DP-94030232	PUMP HEAD	2
*4	DP-94986997	KIT INLET CAP	2
❖ 5	DP-82415450	GASKET	4
*6	DP-94987897	KIT OUTLET CAP	2
7	DP-86290000	SCREW TCEI M8X55	8
8	SC-84052100	SUCTION CONNECTOR DIA 20	1
9	DP-80306050	O-RING, 1.78X12.42	1
■ *10	DP-94986897	KIT INLET MANIFOLD	1
11	SC-82004210	WING NUT G.3/4	1
12	DP-94990997	KIT DIAPHRAGM WASHER/SCREW	2
13	DP-94000809	CONROD	2
14	DP-94000701	PISTON SLEEVE	2
■ *15	DP-94986797	KIT DAMPER BODY	1
16	DP-94030109	CRANKCASE	1
17	DP-86160500	AIR VALVE	1
■ 18	DP-94004131	DIAPHRAGM BALLASTER	1
19	DP-94000309	COVER BALLASTER TOP	1
20	DP-84368500	WASHER DIA. 8,2X15X1,5	4
21	DP-86294500	SCREW TCEI M8X60 UNI 5931	2
*22	DP-94986697	KIT OIL FILLER	1
23	DP-94985597	KIT OIL INDICATOR	1
24	DP-86295100	SCREW TCEI M8X65	2
25	DP-85200400	PISTON PIN	2
26	DP-80000300	SNAP RING DIA. 10	4
27	DP-94001708	PISTON POLY 2020	2
*30	DP-80308090	O-RING 1,78X82,27	1
31	DP-94038426	SHAFT	1
32	DP-94040042	GEAR X=48	1
33	DP-81252200	BALL BEARING	1
34	DP-94038309	CRANKCASE	1
*35	DP-80321064	O-RING 2.62X75.87	1
36	DP-86330000	SCREW M10X30	4
37	DP-81263100	BALL BEARING	1
42	DP-94002632	SPACER	1
43	DP-81252200	BALL BEARING	1

ITEM	PART NUMBER	DESCRIPTION	QTY
44	DP-81268800	BEARING	1
45	DP-94004776	CONROD RING	2
46	DP-94002732	SPACER	1
47	DP-86230100	SCREW M6X35	2
48	DP-94021009	MOTOR FLANGE	1
49	DP-94040342	PINION Z=9 (D. 3/4")	1
49	DP-94040242	PINION Z=9 (D. 5/8")	1
50	DP-80643600	TAB 4,75X5X30	1
51	DP-80211750	OIL SEAL 30X40X7 VITON	1
52	DP-83801200	STUD M6X18	1
61	DP-81454500	NUT M6	3
62	DP-84358500	WASHER D.6	5
67	SC-1066-2	PRESSURE REGULATOR	1
68	SC-94020032	PRESSURE REGULATOR BODY	1
69	SC-05006851	SEAT	1
70	SC-80305600	O-RING 1.78X8.73	1
71	SC-94020432	POPPET	1
72	SC-80317400	O-RING 2.62X9.92	4
73	SC-85104500	PIN DIA 3X30	1
74	SC-94007348	SPRING	1
75	SC-94020232	LEVER	1
76	SC-80319900	O-RING 2.62X21.89	1
77	SC-94020332	KNOB	1
78	SC-94020132	PRESSURE REGULATOR PLUG	1
79	SC-82001500	WING NUT G.1/2	2
80	SC-84152800	OUTLET CONN DIA.8	1
81	SC-84155100	RETURN CONN DIA.13	1
82	DP-94020649	QUICK RELEASE PIN	1
83	DP-80321350	O-RING, 3.0X11	1
84	DP-84354200	WASHER D.5,3X10X1	2
85	SC-86194390	SCREW TCEI M5X45 UNI 5931	2
86	DP-80321700	O-RING 3.0X14	1
87	SC-83001000	PRESSURE GAUGE (OPT)	1
88	SC-94020732	COUPLING (OPT)	1
89	SC-94984997	PRESSURE GAUGE KIT (OPT)	1

DP-43.1-GRP

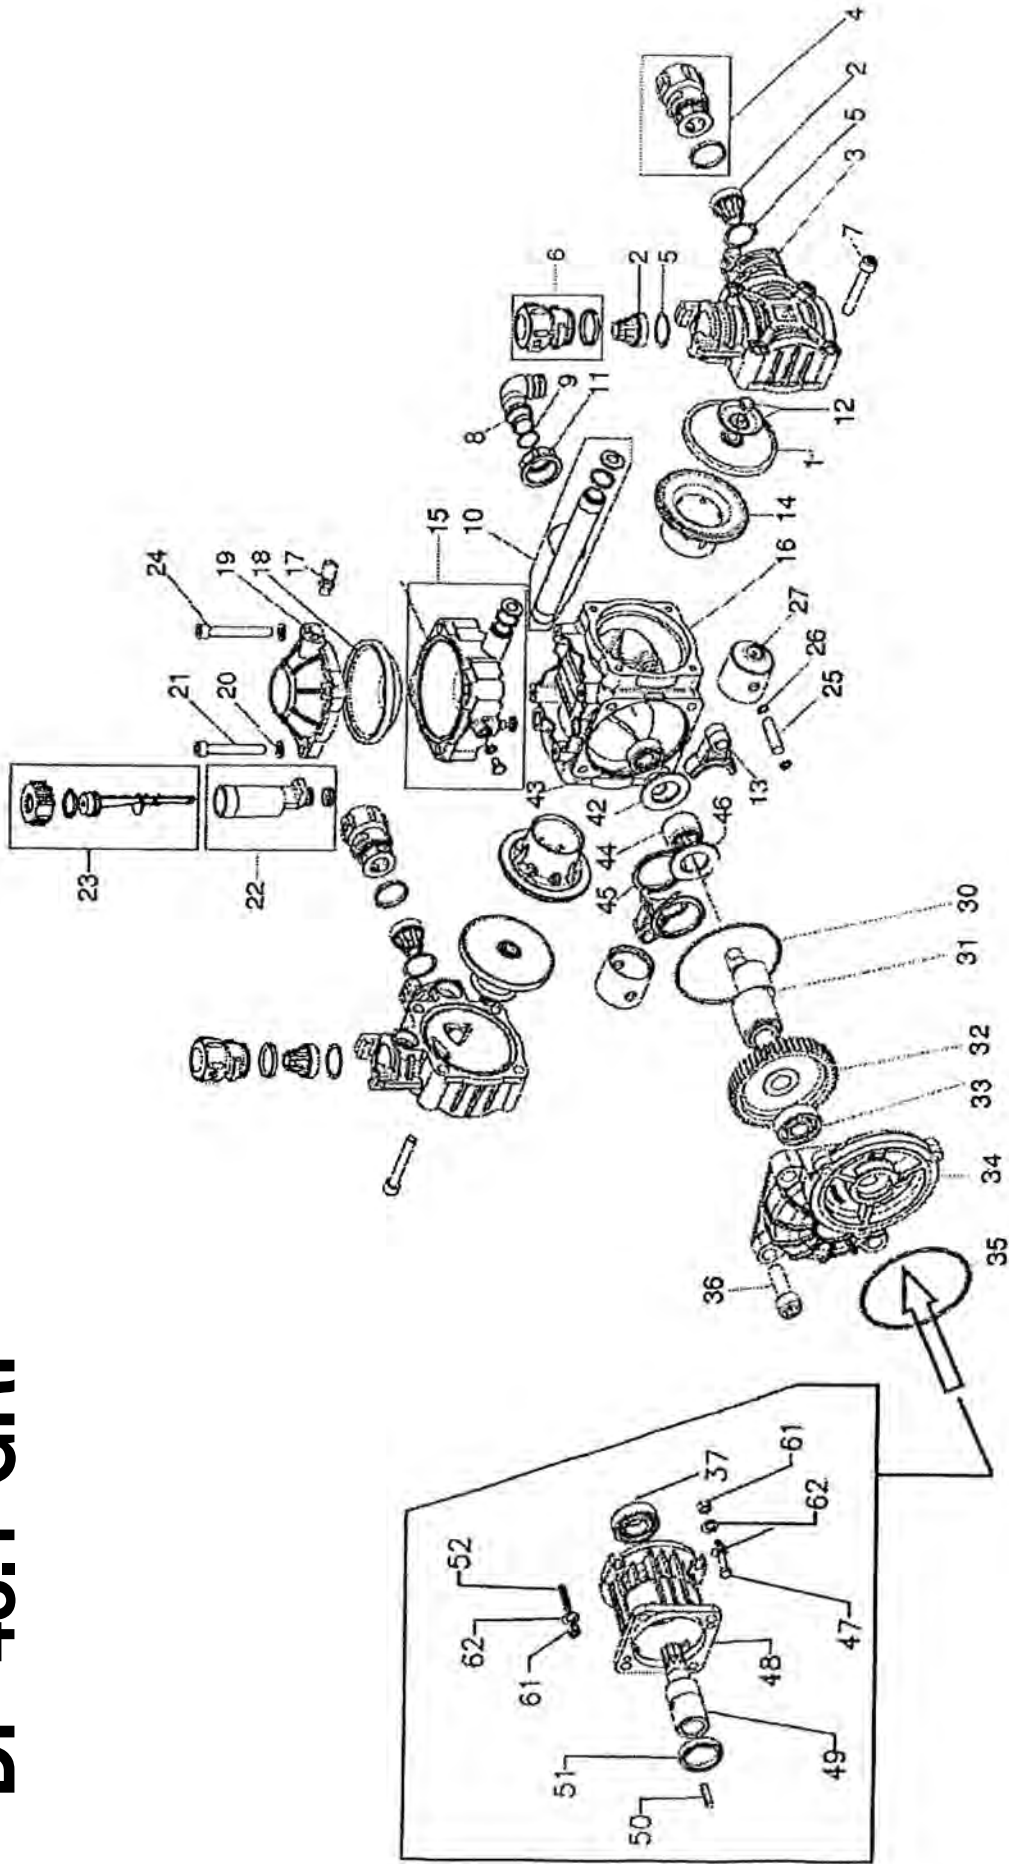


❖ VALVE KIT
DP-94991697
*REPAIR KIT
DP-94994297

DIAPHRAM PUMP DP-43.1-GRP

■ DP-94987197
DIAPHRAM KIT

ITEM	PART NUMBER	DESCRIPTION	QTY	ITEM	PART NUMBER	DESCRIPTION	QTY
■ 1	DP-94004031	PISTON DIAPHRAGM	2	31	DP-94038426	SHAFT	1
❖ 2	DP-94982997	VALVE ASSY	4	32	DP-94040042	GEAR X=48	1
3	DP-94030232	PUMP HEAD	2	33	DP-81252200	BALL BEARING	1
*4	DP-94986997	KIT INLET CAP	2	34	DP-94038309	CRANKCASE	1
❖ 5	DP-82415450	GASKET	4	*35	DP-80321064	O-RING 2.62X75.87	1
*6	DP-94987897	KIT OUTLET CAP	2	36	DP-86330000	SCREW M10X30	4
7	DP-86290000	SCREW TCEI M8X55	8	37	DP-81263100	BALL BEARING	1
8	SC-84052100	SUCTION CONNECTOR DIA 20	1	42	DP-94002632	SPACER	1
9	DP-80306050	O-RING, 1.78X12.42	1	43	DP-81252200	BALL BEARING	1
■*10	DP-94986897	KIT INLET MANIFOLD	1	44	DP-81268800	BEARING	1
11	SC-82004210	WING NUT G.3/4	1	45	DP-94004776	CONROD RING	2
12	DP-94990997	KIT DIAPHRAGM WASHER/SCREW	2	46	DP-94002732	SPACER	1
13	DP-94000809	CONROD	2	47	DP-86230100	SCREW M6X35	2
14	DP-94000701	PISTON SLEEVE	2	48	DP-94021009	MOTOR FLANGE	1
■*15	DP-94986797	KIT DAMPER BODY	1	49	DP-94040342	PINION Z=9	1
16	DP-94030109	CRANKCASE	1	50	DP-80643600	TAB 4,75X5X30	1
17	DP-86160500	AIR VALVE	1	51	DP-80211750	OIL SEAL 30X40X7 VITON	1
■18	DP-94004131	DIAPHRAGM BALLASTER	1	52	DP-83801200	STUD M6X18	1
19	DP-94000309	COVER BALLASTER TOP	1	61	DP-81454500	NUT M6	3
20	DP-84368500	WASHER DIA. 8,2X15X1,5	4	62	DP-84358500	WASHER D.6	5
21	DP-86294500	SCREW TCEI M8X60 UNI 5931	2				
*22	DP-94986697	KIT OIL FILLER	1				
23	DP-94985597	KIT OIL INDICATOR	1				
24	DP-86295100	SCREW TCEI M8X65	2				
25	DP-85200400	PISTON PIN	2				
26	DP-80000300	SNAP RING DIA. 10	4				
27	DP-94001708	PISTON POLY 2020	2				
*30	DP-80308090	O-RING 1,78X82,27	1				

DP-43-P

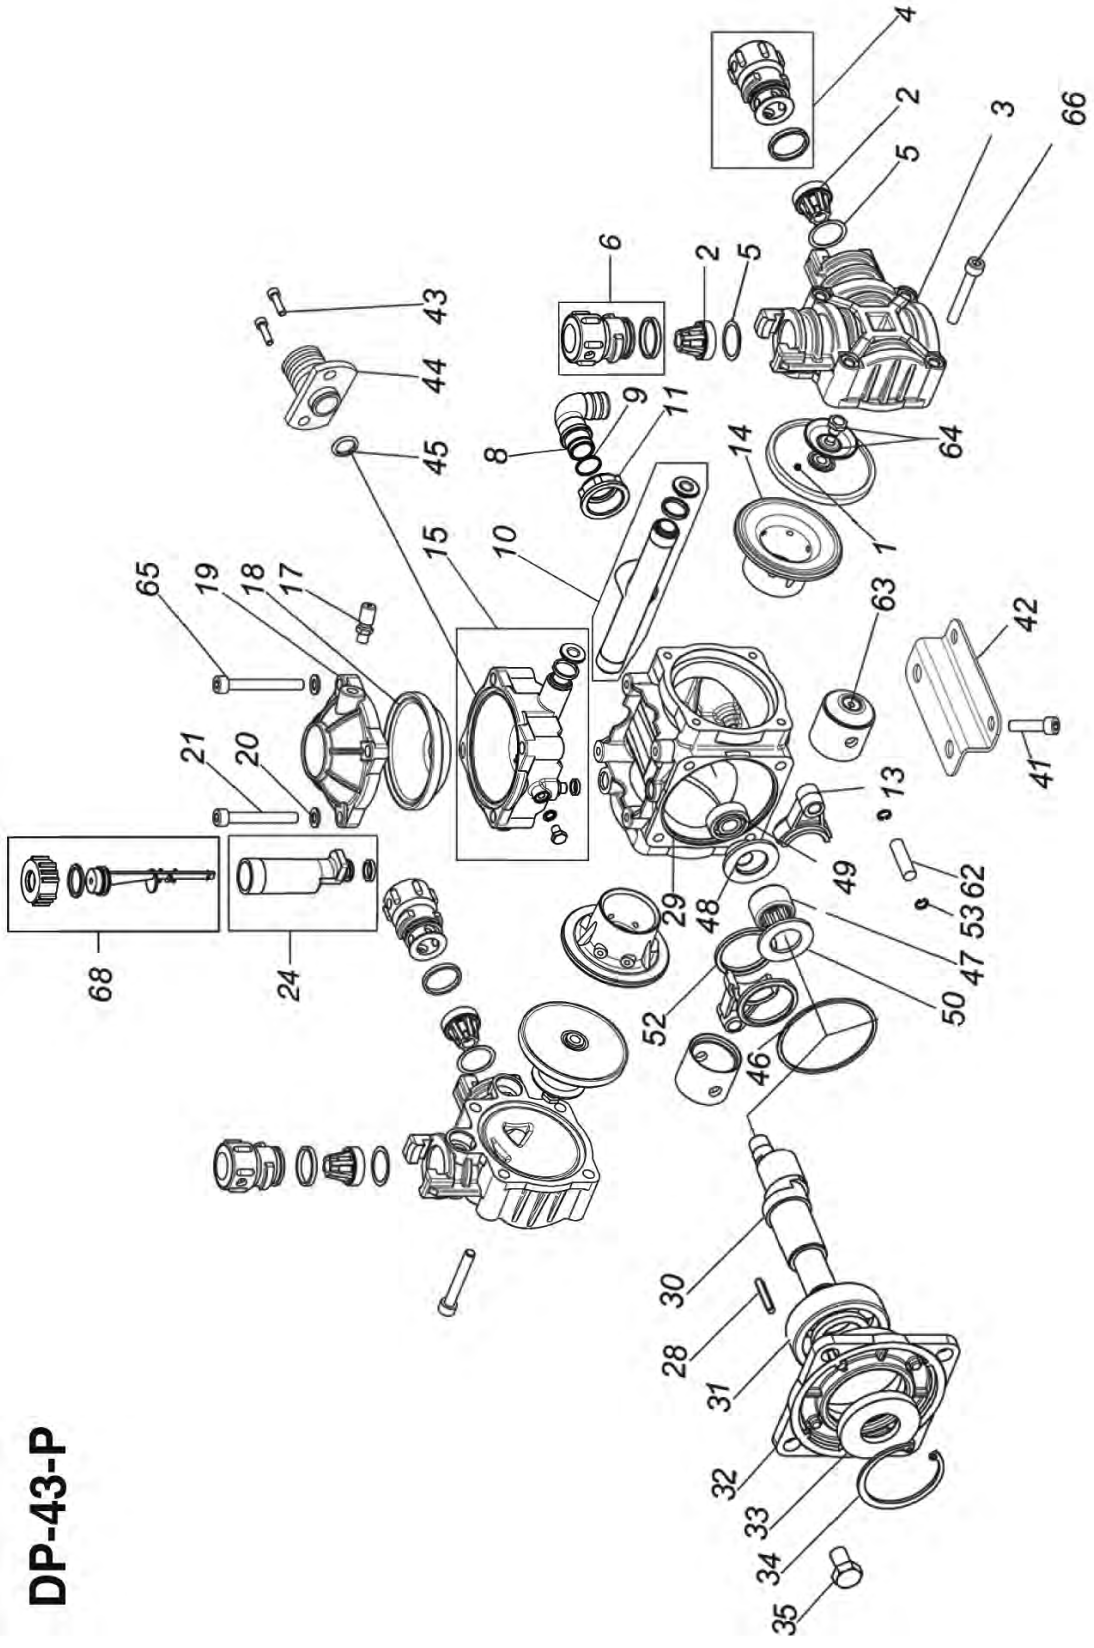

*REPAIR KIT
DP-94991297

DIAPHRAGM PUMP DP-43-P

❖VALVE KIT
DP-94991697

ITEM	PART NUMBER	DESCRIPTION	QTY
*1	DP-94004031	PISTON DIAPHRAGM	2
❖2	DP-94982997	CHECK VALVE	4
3	DP-94030232	PUMP HEAD	2
*4	DP-94986997	KIT, INLET CAP	2
*❖5	DP-82415450	GASKET	4
*6	DP-94987897	KIT, OUTLET CAP	2
8	DP-84052100	SUCTION CONNECTOR	1
*9	DP-80306050	O-RING 1.78X12.42	1
*10	DP-94986897	KIT, INLET MANIFOLD	1
11	SC-82004210	WING NUT G.3/4	1
13	DP-94000809	CONROD	2
14	DP-94000701	PISTON SLEEVE	2
*15	DP-94986797	KIT, DAMAPER BODY	1
17	DP-86160500	AIR VALVE	1
*18	DP-94004131	DIAPHRAGM DAMPENER	1
19	DP-94000309	COVER BALLASTER TOP	1
20	DP-84368500	WASHER DIA. 8,4X15X15X1,5	4
21	DP-86294500	SCREW M8X60	2
*24	DP-94986697	KIT, OIL FILLER	1
28	DP-80643600	TAB 4,75X5X30	1
29	DP-94030109	CRANKCASE	1
30	DP-94032326	CRANKSHAFT 3/4"	1
31	DP-81272500	BALL BEARING	1

ITEM	PART NUMBER	DESCRIPTION	QTY
32	DP-94033609	BEARING HOUSING	1
33	DP-80209990	OIL SEAL 25X62X17	1
34	DP-80136900	SNAP RING D.52	1
35	DP-86318500	SCREW M10X16	4
41	DP-86205900	SCREW M6X14	4
42	DP-94009961	MOUNTING RAIL	2
43	DP-86193460	SCREW M5X16	2
44	DP-31135751	SS OUTLET CONNECTOR	1
45	DP-80321700	O-RING 3,0X14	1
*46	DP-80308090	O-RING, D.1.78X82.27	1
47	DP-81268800	NEEDLE BEARING	1
48	DP-94002632	SPACER	1
49	DP-81252200	BALL BEARING	1
50	DP-94002732	SPACER	1
52	DP-94004776	CONROD RING	2
53	DP-80000300	SNAP RING DIA. 10	4
62	DP-85200400	PISTON PIN	2
63	DP-94001708	PISTON	2
64	DP-94990997	KIT, DIAPH. WASHER/SCREW	2
65	DP-86295100	SCREW M8X65	2
66	DP-86290000	SCREW M8X55	8
*68	DP-94985597	KIT, ROP OIL INDICATOR	1

NOTES

NOTES



DIVISION OF ADVANCED SYSTEMS TECHNOLOGY, INC.
 165 Electronics Blvd., Huntsville Alabama 35824
 Telephone: (256) 721-9090 • FAX (256) 721-9091
 Call Toll Free: 1-800-253-2583

TROUBLES AND CURES

TROUBLES	CAUSES	CURES
The pump doesn't reach the required pressure	<ul style="list-style-type: none"> • valves have worn seats • suction hose with air pockets or irregular elbows • worn nozzles or with wrong diameter (see chart) • Clogged strainer 	<ul style="list-style-type: none"> • check valves • check hoses • check nozzles • clean strainer
The pressure gauge fluctuates	<ul style="list-style-type: none"> • pump is sucking air, or air hasn't been evacuated completely • valves blocked 	<ul style="list-style-type: none"> • start pump with the gun open to evacuate the air and commutate • clean and change valves
The liquid flow is irregular	<ul style="list-style-type: none"> • the air in the pulsation-damper is incorrectly set 	<ul style="list-style-type: none"> • check pressure in pulsation damper (see chart)
Output drops and the pump is noisy	<ul style="list-style-type: none"> • oil level is too low 	<ul style="list-style-type: none"> • top up with oil to correct level (halfway of the sump), when pump is operating
Oil comes out of the discharge pipe	<ul style="list-style-type: none"> • one or more diaphragms are broken 	<ul style="list-style-type: none"> • Drain the pump of oil. Dismantle the head and change diaphragms. Fill to the correct oil level.
Oil is changing color into white	<ul style="list-style-type: none"> • Diaphragm failures. Stop pump immediately. 	<ul style="list-style-type: none"> • Drain the pump of oil. Dismantle the head and change diaphragms. Fill to the correct oil level.

LIMITED WARRANTY

THIS WARRANTY IS IN LIEU OF ALL OTHER WRITTEN OR EXPRESS WARRANTIES AND REPRESENTATIONS. ANY IMPLIED WARRANTIES INCLUDING MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE ARE EXPRESSLY LIMITED TO THIS WRITTEN WARRANTY. CDS-JOHN BLUE COMPANY SHALL NOT BE LIABLE FOR CONSEQUENTIAL DAMAGES.

Use of this product for any purpose other than its original intent, abuse of the product, and/or any modification to the original product is strictly prohibited by the manufacturer, CDS-John Blue Company. Any modification to this product should be approved by CDS-John Blue Company prior to use. CDS-John Blue Company will deny Warranty claims and liability in any situation involving misuse, abuse or modification.

Each new machine or component manufactured by CDS-John Blue Company through original buyer is warranted by CDS-John Blue Company to buyer and to any party or parties to whom buyer may resell, lease or lend the equipment to be free from defects in material and workmanship under normal use and service. This obligation of CDS-John Blue Company under this warranty is limited to the repair or replacement of defective parts or correction of improper workmanship of any parts of such equipment which shall within one year from the date of CDS-John Blue's original delivery thereof, be returned to CDS-John Blue's factory, transportation charges prepaid and which CDS-John Blue Company shall determine to its satisfaction upon examination thereof to have been thus defective. When it is impractical to return the defective parts of such equipment to CDS-John Blue's factory, then CDS-John Blue shall have no liability for the labor cost involved in repair or replacing any such parts and shall be liable solely for supplying the material necessary to replace or repair the defective parts, provided that prior thereto CDS-John Blue Company shall have determined to its satisfaction that any such parts are thus defective.

This warranty shall not apply to any equipment which shall have been repaired or altered outside CDS-John Blue's factory in any way so as to affect its durability, nor which has been subjected to misuse, abuse, negligence or accident, or operated in any manner other than in accordance with operating instructions provided by CDS-John Blue Company. This warranty does not extend to repairs made necessary by the use of inferior or unsuitable parts or accessories, or parts or accessories not recommended by CDS-John Blue Company.

CDS-John Blue Company makes no warranties in respect to parts, accessories or components not manufactured by CDS-John Blue Company, same ordinarily being warranted separately by their respective manufacturers.

DIVISION OF ADVANCED SYSTEMS TECHNOLOGIES

HUNTSVILLE, AL

(256) 721-9090